


How To Use the VHS to DVD Converter

1. Turn on the converter using the power button in the lower left corner.



2. Insert the VHS tape you wish to copy into the “4 Head Hi-Fi Stereo” slot on the left hand side.

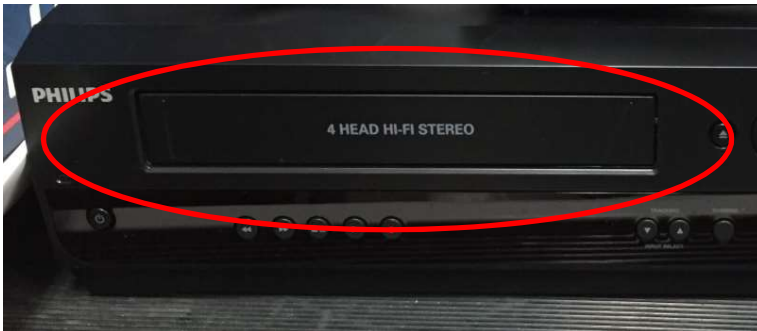

3. Ensure that the tape is fully rewind/set to the desired point for recording. Use the buttons below the VHS slot to fast forward/rewind the tape. If necessary, turn on the monitor to check which position you’re at on the tape. Headphones can be inserted into the converter if you need to check the sound.



4. Open the DVD drive using the eject button. Insert a blank DVD and shut the drive by pressing the eject button a second time. Please DO NOT push the tray in manually as this is bad for the mechanism.



5. Wait for the disc to finish loading. Press the “Dubbing” button to begin recording.



6. Turn off the monitor for privacy, and place the “Recording in Progress” sign in front of the converter so that patrons do not touch the converter.




7. When the conversion has finished, hit SETUP on the remote control:



8. Select DVD menu on the screen:



9. Select Finalize:

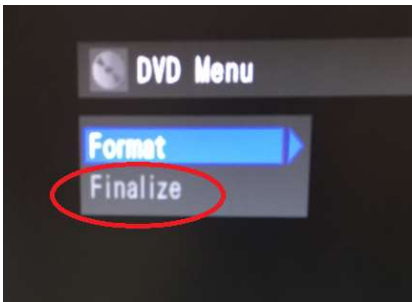

10. When the DVD has been finalized, hit the eject button and take out the VHS tape.



11. Eject the DVD disc.

